

RCA

Universal Remote Control



Thank you for choosing an RCA Universal Remote Control. You have selected a fine product designed to provide years of performance. Before attempting to use your Remote Control, please remove all parts from the box and read the installation and use instructions carefully.



Limited 90 Day Warranty

RCU410RS

Table Of Contents

Button Description.....	2-3
Battery Installation	3
Programming Your Universal Remote	
TV.....	4
TV Codes	4-5
VCR	6
VCR Codes	6-7
DBS	8
DBS Codes	8
Cable Box	9
Cable Box Codes	9
DVD•AUX	10
DVD Codes.....	10
Programming With Code Search	11
Retrieving Codes	11
TV Menu.....	12
DBS Menu.....	13
DVD Menu	14
Sleep Feature	15
Trouble Shooting	16

**This RCA Universal Remote Is Compatible With
Most Models Of The Following Brands**
(Of Infrared Remote Controlled Components manufactured after 1990):



Button Description

INDICATOR LIGHT

The Indicator Light flashes to show that the remote is working.

ON•OFF

The ON•OFF button operates the same as your original remote. Note: Some RCA, GE and ProScan models require you to press the device button to turn the device on and the ON•OFF button to turn the device off.

CODE SEARCH

Used to program the remote or to search through codes.

TV, VCR, DVD•AUX, DBS•CABLE

The TV, VCR, DBS•CABLE, and DVD•AUX buttons are used to select the device you want to control.

REVERSE, PLAY, FORWARD, RECORD, STOP, PAUSE

The REVERSE, PLAY, FORWARD, RECORD, STOP, and PAUSE buttons operate the same as on your original VCR or DVD remote. You must press the RECORD button **twice** to begin recording.

TV•VCR

When in VCR mode, the TV•VCR button operates the TV•VCR function of your VCR.

ENTER

The ENTER button is used to complete channel selection for some brands of TV. It is also used to complete the code entry process, finally, it is used in Menu Mode as a Select or OK.

VOL & CH

The VOL (Volume) and CH (Channel) buttons increase or decrease the channel numbers or volume.

MUTE

To MUTE the volume on the TV.

PREV CH

PREV CH allows you to go to the previous channel you selected. Operates the same as Last Channel, Go Back or Recall button on your original remote.

0-9

The number buttons operate the same as on your original remote, and are used for entering device codes or channel numbers.

MENU

The MENU button calls up the TV, DBS and DVD set up menus.

SLEEP

The SLEEP button allows you to set a time to turn off the TV automatically.

Battery Installation

Your Universal Remote requires 2 new AAA alkaline batteries.

To install the batteries:

1. On the back of the remote, push and slide the cover off.
2. Match the batteries to the + and - marks inside the battery case, then insert the batteries.
3. Press and slide the battery cover back into place.


Note: Reprogramming may be required after batteries are removed.

Programming For TV

1. Manually turn on the TV.

Find the three-digit code for your TV in the code list below.


2. Press and hold the **CODE SEARCH** button until the **INDICATOR LIGHT** lights, then release the **CODE SEARCH** button.

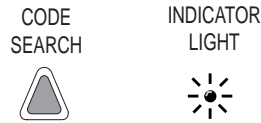

3. Press and release the **TV** button (The **INDICATOR LIGHT** will blink then remain lit).



4. Enter the code using the Number Buttons. After your code is entered, the **INDICATOR LIGHT** will turn off.

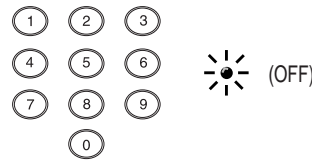


5. Aim the remote at your TV and press the **ON•OFF** button. Your TV should turn off.




Note: If your TV does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, try the Code Search method on page 11.

 6. With your TV on, press **CH+**. If the TV responds, no further programming is required.



7. Enter your code here for easy reference.


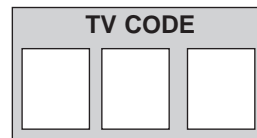


TV Code List

Abex.....	172	Dimensia	000
Admiral	001, 173	Dumont	004, 151
Advertura	174	Dynatech	004
Aiko.....	016	Electroband	002
Akai	002	Electrohome	004, 006
Alleron	046	002, 003, 019, 022
Amtron	038	Emerson	030, 171, 191, 004
Anam National.....	003, 038	038, 046, 006, 012, 023, 024, 025
AOC.....	006, 005, 004, 007	026, 027, 028, 029 031, 032,
Audiovox	038	033, 034, 035, 036, 037, 039
Belcor.....	004	041, 042, 043, 044, 047, 123
Bell & Howell	001, 083, 162	124, 162, 177, 179
Bradford.....	038	Envision	004, 006
Brokwood.....	004	Fisher	048, 049, 051, 162, 180
Candle.....	004, 006, 008, 174	Fujitsu	046
Celebrity.....	002	Funai	038, 046
Citizen.....	016, 171, 004, 006, 008	Futuretec	038
.....	038, 105, 174, 177	GE	000, 054, 003, 004, 006
Colortyme	004, 006	022, 052, 055, 087, 164, 165
Concerto	004, 006	166, 167, 168, 181
Contec / Cony	012, 013, 038	Gibraltar.....	004, 151
Craig	038	Grundy.....	171, 038, 046
Crown	038, 171	Hallmark	004, 006
Curtis Mathes	171, 000, 004	Harvard	038
.....	006, 015, 105, 162	Hitachi	059, 004, 148, 006, 012
CXC.....	038	013, 060, 061, 135, 136, 137
Daewoo	016, 190, 005	138, 139, 140, 141, 142, 143
.....	171, 004, 006, 017, 127	144, 145, 146, 150, 179
Daytron	004, 006, 171	IMA	038

TV Code List Continued

Infinity	062	Sylvania.....	062, 004, 006, 088, 076
Janeil	174	116, 008, 019, 068, 069
JBL.....	062	075, 077, 161, 183
JCB.....	002	Symphonic.....	038, 189, 033
JC Penny.....	000, 054, 005, 171	Tandy.....	173
.....	004, 052, 006, 172, 008, 022, 058	Tatung.....	003
.....	063, 064, 072, 087, 105, 181	Technics.....	054
Jensen.....	004, 006	Techwood.....	004, 006, 054
JVC.....	159, 013, 012, 182, 054	Teknika.....	016, 005, 171, 004, 006
.....	060, 065, 066, 067, 123, 157, 158	008, 012, 013, 038, 046, 076
Kawasho.....	002, 004, 006	082, 083, 105, 170
Kenwood.....	004, 006, 019	Tera.....	004, 012, 093
Kloss Novabeam.....	068, 069, 174, 183	TMK.....	004, 006
KTV.....	171, 038, 177, 070	Toshiba.....	105, 162, 160
LG (Goldstar).....	005, 156, 004, 006	161, 049, 072, 118
.....	172, 012, 019, 056, 057, 058, 155, 171	Totevision.....	171
Loewe.....	062	Universal.....	052, 087
Logik.....	083	Victor.....	066, 182
Luxman.....	004, 006	Vidtech.....	004, 005, 006
LXI.....	000, 062, 006, 073	Viking.....	174
.....	162, 181, 049, 072	Wards.....	000, 062, 095, 005, 004
Magnavox.....	062, 004, 006, 130	046, 052, 006, 083, 001, 019
.....	134, 183, 008, 019, 068, 069	024, 033, 068, 069, 075, 076
.....	075, 076, 077, 088, 131	087, 088, 119, 120
.....	132, 133, 219, 235	Yamaha.....	004, 005, 006, 019
Majestic.....	083	Zenith.....	051, 083, 004, 152
Marantz.....	004, 006, 062	151, 153, 154, 217
Megatron.....	006, 059		
Memorex.....	083, 006, 001, 082, 162		
MGA.....	005, 004, 006		
.....	079, 082, 019, 022, 051, 080		
Midland.....	054, 151, 171, 172, 181		
Minutz.....	052		
Mitsubishi.....	005, 004, 006		
.....	125, 082, 081, 019, 022		
.....	051, 079, 080, 135		
Montgomery Ward.....	083		
Motorola.....	003, 173		
MTC.....	005, 004, 105, 006		
Multitech.....	038		
NAD.....	006, 185, 072		
NEC.....	005, 004, 006, 003		
Nikko.....	006, 016		
NTC.....	016		
Onwa.....	038		
Optimus.....	185		
Optonica.....	095, 173		
Orion.....	191, 035		
Panasonic.....	170, 054, 062, 003		
Philco.....	062, 005, 004, 006, 183		
.....	008, 012, 019, 003		
.....	068, 069, 075, 077		
Philips.....	062, 004, 075, 008, 019		
.....	003, 012, 068, 069		
.....	076, 086, 087, 088		
Pilot.....	004, 171		
Pioneer.....	004, 006, 090		
.....	091, 092, 136, 179, 185		
Portland.....	016, 005, 171, 004, 006		
Price Club.....	105		
Prism.....	054		
Proscan.....	000, 181		
Proton.....	004, 006, 012, 093		
Pulsar.....	151		
Pulser.....	004		
Quasar.....	003, 054, 070		
Radio Shack / Realistic.....	000, 095, 171, 004, 038, 006, 012, 049, 162		
RCA.....	000, 181, 100, 233, 203		
.....	212, 098, 005, 003, 004, 006		
.....	007, 019, 096, 099, 101, 102, 103		
.....	129, 179, 188, 190		
Runco.....	151		
Sampo.....	004, 006, 171, 172		
Samsung.....	171, 004, 005, 105, 006		
.....	012, 015, 017, 019, 104, 106, 172		
Sansui.....	191		
Sanyo.....	048, 080, 004		
.....	180, 162, 169, 049		
Scotch.....	006		
Scott.....	004, 038, 046		
.....	006, 012, 024, 035		
Sears.....	000, 048, 189, 004, 046		
.....	006, 013, 019, 049, 051, 066		
.....	072, 162, 180, 181		
Sharp.....	173, 095, 171, 004, 006		
.....	012, 029, 111, 112, 113, 122		
Shogun.....	004		
Signature.....	001, 083		
Simpson.....	008		
Sony.....	002, 218		
Soundesign.....	004, 038, 046, 006, 008		
Squareview.....	189		
SSS.....	004, 038		
Starlite.....	038		
Supre-Macy.....	174		
Supreme.....	002		

  

Programming For VCR

1. Manually turn on the VCR.

Find the three-digit code for your VCR in the code list below.

2. Press and hold the **CODE SEARCH** button until the **INDICATOR LIGHT** lights, then release the **CODE SEARCH** button.




3. Press and release the **VCR** button (The **INDICATOR LIGHT** will blink then remain lit).




4. Enter the code using the Number Buttons.

After your code is entered, the **INDICATOR LIGHT** will turn off.

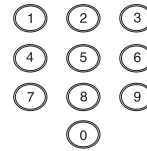

 5. Aim the remote at your VCR and press the **ON•OFF** button. Your VCR should turn off.




Note: If your VCR does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, try the Code Search method on page 11.


ON•OFF



 6. With your VCR on, press **CH+**. If the VCR responds, no further programming is required.



7. Enter your code here for easy reference.

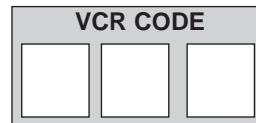

VCR Code List

Admiral.....001	Daewoo027, 025, 015, 017, 019
Adventura.....026026, 028, 110
Aiko027	Daytron.....110
Aiwa.....026	DBX.....009, 010
Akai.....008, 113, 112, 003, 005, 007, 111	Dimensia000
American High021	Dynatech026
Asha.....013	Electrohome.....014, 029
Audio Dynamics.....009, 010	Electrophonic.....014
Audiovox014	Emerson014, 025, 026, 065
Bell & Howell011041, 015, 012, 021
Beaumark.....013024, 029, 030, 031
Broksonic.....025, 012032, 033, 034, 036
Calix014037, 038, 039, 040
Candle014, 013, 015042, 044, 045, 046
.....018, 016, 017, 019047, 105, 113, 116
Canon021, 022117, 130
Capemhart020, 110	Fisher011, 023, 052, 048
Carver062049, 050, 051, 118
CCE027, 061	Fuji021, 119
Citizen014, 013	Funai026
.....027, 015, 016, 017, 018, 019	Garrard.....026
Colortyme.....009	GE000, 022, 013, 115
Colt.....061053, 021, 120
Craig013, 014, 023, 061	Grandiente.....026
Curtis-Mathes022, 013, 115, 024, 000,	Harley Davidson.....026
.....009, 016, 018, 021	Harman Kardon009
Cybernex013	Harwood.....061

VCR Code List Continued

Headquarter	011	Signature	001
Hitachi	055, 120, 056, 057	Singer	021, 061, 128
.....	107, 111	Sony	099, 119, 098
HI-Q	023	STS	021, 107
Instant Replay	021	Sylvania	022, 062, 026, 065
JCL	021	021, 063, 065, 124
JC Penny	014, 011, 022, 013	Symphonic	026
.....	009, 118, 060, 107	Tandy	011
.....	010, 021	Tashiko	014
Jensen	055, 056, 111	Tatung	111
JVC	009, 010, 011, 018	Teac	026, 085, 111
.....	111, 123	Technics	021, 109
Kenwood	009, 010, 123, 111	Teknika	026, 022, 014, 129
.....	011, 016, 018	021, 100
KLH	061	Toshiba	015, 055, 049, 051
Kodak	014, 021	065, 116
LG (Goldstar)	014, 018, 054, 009	Totevision	013, 014
Lloyd	026	TMK	013, 024, 047
Logik	061	Unitech	013
LXI	014	Vector Research	009, 010
Magnavox	022, 062, 104, 063	015, 016
.....	021, 108, 124	Victor	010
Magnin	013	Video Concepts	009, 010
Marantz	062, 011, 010, 016	015, 016, 113
.....	009, 018, 021, 022, 064	Videosonic	013
Marta	014	Wards	026, 022, 013, 055
Matsushita	021	001, 061, 014, 015
MEI	021	021, 023, 029, 056
Memorex	026, 014, 104, 001	096, 101, 102, 103
.....	011, 013, 021, 022, 023	XR-1000	107, 116
MGA	029, 065, 113	021, 026, 061
MGN Tech.	013	Yamaha	009, 010, 011
Midland	053	018, 111
Minolta	055, 056, 107	Zenith	104, 119, 098, 128
Mitsubishi	065, 055, 072, 029		
.....	056, 066, 067, 068		
.....	069, 070, 071, 073		
.....	074, 106, 113, 123		
Montgomery Ward	001, 075		
Motorola	001, 021		
MTC	013, 026		
Multitech	013, 016, 026		
.....	053, 061		
NEC	064, 076, 011, 010		
.....	079, 009, 018, 078		
.....	111, 123		
Nikko	014		
Noblex	013		
Olympus	021		
Optimus	001, 014		
Optonica	096		
Orion	031		
Panasonic	109, 021, 022, 125		
.....	126, 127		
Pentax	016, 055, 056		
.....	107, 120		
Pentax Research	018		
Philco	022, 062, 063, 021		
Philips	062, 096, 022		
.....	021, 124		
Pilot	014		
Pioneer	055, 010, 080		
.....	081, 123		
Portland	016, 017, 019, 110		
ProScan	000		
Protec	061		
Pulsar	104		
Quarter	011		
Quartz	011		
Quasar	021, 022, 125		
RCA	000, 091, 087, 115		
.....	083, 088, 090, 089		
.....	055, 022, 091, 003		
.....	013, 021, 056, 082		
.....	084, 085, 086, 107, 120, 125		
Radio Shack / Realistic	022		
.....	014, 001, 011, 013		
.....	023, 021, 026, 029		
.....	049, 050, 096		
Radix	014		
Randex	014		
Ricoh	128		
Runco	104		
Samsung	013, 015, 112, 053		
.....	055, 033		
Sanky	001, 104		
Sansui	010, 092, 111, 123		
Sanyo	011, 013, 023		
Scott	025, 065, 015, 012		
.....	032, 038, 116		
Sears	014, 055, 011, 023		
.....	118, 021, 028, 048		
.....	049, 050, 051, 056, 107		
Sharp	001, 095, 017, 029		
.....	094, 096, 097		
Shintom	056, 061, 098		
Shogun	013		

Programming For DBS

1. Manually turn on the DBS.

Find the three-digit code for your DBS in the code list below.

2. Press and hold the **CODE SEARCH** button until the **INDICATOR LIGHT** lights, then release the **CODE SEARCH** button.




3. Press and release the **DBS•CABLE** button (The **INDICATOR LIGHT** will blink then remain lit).




4. Enter the code using the Number Buttons.

After your code is entered, the **INDICATOR LIGHT** will turn off.

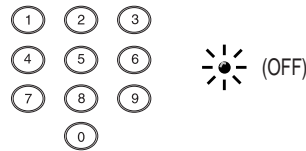


 5. Aim the remote at your DBS and press the **ON•OFF** button. Your DBS should turn off.



Note: If your DBS does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, try the Code Search method on page 11.

 6. With your DBS on, press **CH+**. If the DBS responds, no further programming is required.



7. Enter your code here for easy reference.

DBS CODE		

DBS Code List

Alphastar	079	Sony	072
Echostar (Dish System)	089	Toshiba	073
Echosphere (Dish Net).....	078	Uniden	086
GE	071, 080, 081		
Hitachi SYS I	084		
Hitachi SYS II.....	083		
Hughes	083, 077, 090		
Magnavox.....	085		
JVC	082		
Panasonic	075		
Philips.....	085		
Primestar	076		
Proscan	071, 080, 081		
RCA	071, 080, 081		

Programming For Cable Box

1. Manually turn on the Cable Box.

Find the three-digit code for your Cable Box in the code list below.

2. Press and hold the **CODE SEARCH** button until the **INDICATOR LIGHT** lights, then release the **CODE SEARCH** button.




3. Press and release the **DBS•CABLE** button (The **INDICATOR LIGHT** will blink then remain lit).




4. Enter the code using the Number Buttons.

After your code is entered, the **INDICATOR LIGHT** will turn off.

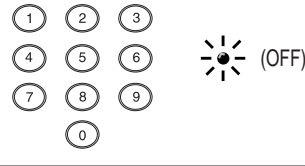


 5. Aim the remote at your Cable Box and press the **ON•OFF** button. Your Cable Box should turn off.




Note: If your Cable Box does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, try the Code Search method on page 11.

 6. With your Cable Box on, press **CH+**. If the Cable Box responds, no further programming is required.



7. Enter your code here for easy reference.

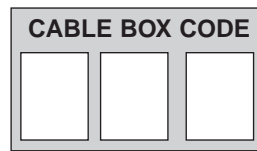

Cable Box Code List

ABC	001, 003, 004	Philips	011, 012, 013, 019
.....	005, 006, 007	025, 030, 031, 032
Antronix	008, 009	Pioneer	034, 033
Archer	008, 009, 010, 011	RCA	047, 000, 049
Cabletenna	008	Realistic	009
Cableview	008	Regal	022, 035
Century	011	Regency	017
Citizen	011	Rembrandt	003
Colour Voice	012, 013	Samsung	034
Comtronics	015	Scientific Atlanta	006, 036
Contec	016	037, 038
Eastern	017	Signal	018
Garrard	011	Signature	003
GC Electronics	009	Sprucer	000
Gemini	018, 019	Standard Component	039
General Instru	049, 001, 003	Starcom	001, 007, 018
Hamlin	035	Stargate	018
Hitachi	003	Starquest	018
Jasco	011	Tocom	004, 023
Jerrold	049, 001, 003, 005	Tusa	018
.....	007, 018, 023, 024, 046	TV86	027
Magnavox	025	Unika	008, 009, 011
Movie Time	027, 028	United Cable	001
NSC	027, 028	Universal	008, 009, 010, 011
OAK	029, 016	View Star	015, 016, 025, 027
Panasonic	000, 048	Zenith	050, 051

The DVD•AUX Button

The DVD•AUX Button allows you to assign another TV, VCR, DBS, Cable Box or DVD. The DVD•AUX Button is defaulted to RCA/DVD systems. To assign another device to the DVD•AUX button:

1. Manually turn on the the device you wish to assign to the **DVD•AUX** button (TV, VCR, Cable Box, DVD or DBS System).

Device	Page
TV	4-5
VCR	6-7
DBS	8
Cable Box	9
DVD	10

Find the three digit code for the device you wish to program in the code list


2. Press and hold the **CODE SEARCH** button until the **INDICATOR LIGHT** lights, then release the **CODE SEARCH** button.



3. Press and release the **DVD•AUX** button. The **INDICATOR LIGHT** will blink.




4. Press **TV, VCR** or **DBS•CABLE** for the device you want to program.
For DVD press **VCR**.
For DBS press **DBS•CABLE**.
For Cable Box press **DBS•CABLE**.
The **INDICATOR LIGHT** will blink again then remain lit.

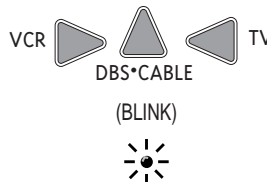

5. Enter the code using the Number Buttons.

After your code is entered, the **INDICATOR LIGHT** will turn off.

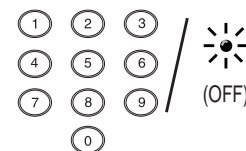


6. Aim the remote at your device and press the **ON•OFF** button. Your device should turn off.

ON•OFF



Note: If your device does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, try the Code Search method on page 11.

 7. With your device on, press **CH+**. If the device responds, no further programming is required.



8. Enter your code here for easy reference. ✓

DVD•AUX CODE				
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
TV	VCR	CABLE	DBS	DVD
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

DVD Code List

Aiwa	350	Pioneer	165
Hitachi	351	ProScan	160
JVC	161, 352	RCA	160
Konka	353, 354	Sanyo	359
Magnavox	162, 356, 357	Sony	166, 360, 361
Mitsubishi	163	Toshiba	167, 362, 363
Panasonic	355	Zenith	364
Philips	162, 356, 357		

Programming With Code Search

If your TV, VCR, DVD, DBS or Cable Box does not respond after you have tried all the codes for your brand, or if your brand is not listed, try searching for your code by following the steps below.

1. Turn on the device you wish to program.
2. Press and hold **CODE SEARCH** until the **INDICATOR LIGHT** lights, then release **CODE SEARCH**.
3. Press and release the device button for the device you are programming (**TV, VCR** or **DBS•CABLE**). The **INDICATOR LIGHT** will blink once then remain lit. DVD codes are programmed under the VCR button.
Note: For AUX, press **DVD•AUX** then the device button you are assigning to DVD•AUX.
4. Press and release **ON•OFF** until your device turns off.
Important: You may have to press **ON•OFF** up to 200 times.
5. When your device turns off, press the **ENTER** button, the **INDICATOR LIGHT** will go off.

CODE
SEARCH



INDICATOR
LIGHT



VCR



TV



DVD•AUX



DBS•CABLE

(BLINK)



ON•OFF



ENTER



(OFF)

Retrieving Codes

If you need to find the three-digit code for your TV, VCR, DBS, DVD or Cable Box after your device is set-up using Code Search, use this procedure.

1. Press and hold **CODE SEARCH** until the **INDICATOR LIGHT** lights, then release **CODE SEARCH**.
2. Press and release the device button for the device's code you are retrieving (**TV, VCR** or **DBS•CABLE**). The **INDICATOR LIGHT** will blink once then remain lit.
Note: For AUX, press **DVD•AUX** then the device button for the code you are retrieving.
3. Press and release **CODE SEARCH**. The **INDICATOR LIGHT** will turn off.
4. Starting with **0** on the keypad, press the number buttons in order (**0-9**) until the **INDICATOR LIGHT** blinks.
5. The number which causes the **INDICATOR LIGHT** to blink is the first digit of your code.
6. Repeat step 4 until you have retrieved all three numbers in the code.

CODE
SEARCH



INDICATOR
LIGHT



VCR



TV



DVD•AUX



DBS•CABLE

(BLINK)



CODE
SEARCH



(OFF)

(BLINK)



Television Menu Function

The TV Menu is used to make changes in the TV settings such as setting color, channels, timers, etc.

Entering the TV Menu Mode:

1. Push the **TV** button on the remote.
2. Push the **MENU** button.

This puts the remote in TV Menu Mode. The TV Menu should now be visible on the television. The **INDICATOR LIGHT** will blink continuously to indicate the remote is now in TV Menu Mode.

While in **TV MENU** these buttons will function as follows:

VOL UP/DOWN buttons will operate as **CURSOR RIGHT/LEFT**.

CH+/- keys will operate as **CURSOR UP/DOWN**.

For RCA, GE, ProScan TVs pushing the **MENU** button will select the high lighted item. The numeric buttons may also be used to select the **MENU** choice. The **ENTER** key may also be used to select all menu choices.

Note: Not all functions in competitive models and brands of televisions may be fully supported.

Exiting the TV Menu Mode:

To exit the Menu Mode and clear the **TV** screen push the **TV** button on the remote. The **INDICATOR LIGHT** should go out indicating the remote is now out of TV Menu Mode and will revert to it's normal mode of operation.

Note: The remote will automatically exit the TV Menu Mode after 10 seconds of inactivity with no buttons being pushed.

Special notes:

 
1. Because of the wide variety of menu formats, some experimenting may be required.
2. SONY: Pressing the **ENTER** button while in menu mode returns to previous menu.
3. ZENITH: Push the menu button a second time to move from the **SET-UP MENU** to the **VIDEO MENU**.



MENU



(BLINK)



CH +



CH -



OR



DBS Menu Function

The DBS Menu is used to navigate thru the Guide screens, to make changes in the DBS settings such as channel lists, passwords, etc.

Entering the DBS Menu Mode:

1. Push the **DBS•CABLE** button on the remote.
2. Push the **MENU** key.

This puts the remote in DBS Menu Mode. The DBS Menu should now be visible on the television. The **INDICATOR LIGHT** will blink continuously to indicate the remote is now in DBS Menu Mode.

While in DBS MENU MODE these buttons will function as follows:

VOLUME UP/DOWN button will operate as **CURSOR RIGHT/LEFT**.

CH+/- button will operate as **CURSOR UP/DOWN**.

For RCA, GE, ProScan DBS systems pushing the **MENU** button will select the highlighted item. The numeric buttons may also be used to select the **MENU** choice. The **ENTER** key may also be used to select all menu choices.

Note: Not all functions in competitive models and brands of DBS systems may be fully supported.

Exiting the DBS Menu Mode:

Push the **DBS•CABLE** button on the remote. The **INDICATOR LIGHT** should go out indicating the remote is now out of DBS Menu Mode and will revert to it's normal mode of operation.

 

Note: The remote will automatically exit the DBS•CABLE Menu Mode after 10 seconds of inactivity with no keys being pushed.

Special notes:

1. Because of the wide variety of menu formats, some experimenting may be required.
2. SONY: Pressing the **ENTER** button while in menu mode returns to previous menu.



(BLINK)

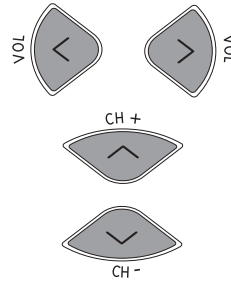

DVD Menu Function

The DVD Menu is used to navigate thru the Navigation screens, to change settings such as language, sub-titles, etc.

Entering the DVD Menu Mode:

1. Push the **DVD•AUX** button on the remote.
2. Push the **MENU** key.

This puts the remote in DVD Menu Mode. The DVD Menu should now be visible on the television. The **INDICATOR LIGHT** will blink continuously to indicate the remote is now in DVD Menu Mode.



(BLINK)




While in DVD MENU MODE these buttons will function as follows:

VOLUME UP/DOWN button will operate as **CURSOR RIGHT/LEFT**.

CH+/- button will operate as **CURSOR UP/DOWN**.

Pushing the **ENTER** button will select the highlighted item. The numeric buttons may also be used to select the **MENU** choice.

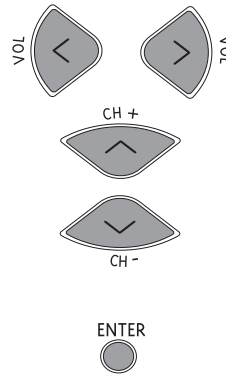

Note: Not all functions in competitive models and brands of DVD systems may be fully supported.

Exiting the DVD Menu Mode:

Push the **DVD•AUX** button on the remote. The **INDICATOR LIGHT** should go out indicating the remote is now out of DVD Menu Mode and will revert to its normal mode of operation.

Note: The remote will automatically exit the DVD•CABLE Menu Mode after 15 seconds of inactivity with no keys being pushed.



Special notes:

1. Because of the wide variety of menu formats, some experimenting may be required.

Sleep Feature


This feature will turn off your TV at the time you choose from 1 to 99 minutes.

To Program Sleep Feature:

1. Press and hold the **SLEEP** button. **INDICATOR LIGHT** will stay lit. Release the **SLEEP** button.
2. Enter time in minutes using the numerical key pad. Indicator light should go off.
(Minutes 1 thru 9: press **0** before the actual number
Maximum: 99 minutes)
3. Leave remote aimed at television. (Sleep Feature will not work unless remote is left aimed at television.)



INDICATOR
LIGHT

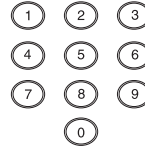

To Turn Off The Sleep Timer:

Sleep timer program will be cancelled and reset to zero by either of the following:

1. Press and hold **SLEEP** button until **INDICATOR LIGHT** blinks or press **ON•OFF** button, turning TV OFF.



(BLINK)

ON•OFF



Trouble Shooting

Problem	Solution
Indicator light not blinking when you press any button	A) Replace the batteries with 2 new AAA Alkaline batteries. B) Check that batteries are properly installed.
The Remote does not operate your device	A) Try all the codes listed for your brand. B) Try the Code Search method (page 11).
Not performing commands properly	Start Code Search over again to locate the proper code.
Problems programming a TV/VCR Combo Unit	Try the VCR code for your brand. Some combo units, however, may require both a TV and a VCR code for full operation.
VCR not recording	As a safety feature on your remote, you must press the REC button twice.
Channel up and down do not function on an RCA TV	Due to some designs, the original remote will only perform these functions.
Problems changing channels	If your original remote required ENTER after a channel, press ENTER after you select a channel.
No response after pressing a button	A) Make sure you have new batteries, and you are aiming your remote at your devices. B) Check that batteries are properly installed (See page 3).
Sleep feature does not work	Remote must remain aimed at television after sleep is set in order for it to work.

Note: Reprogramming may be required after batteries are removed.

For Customer Service, contact the RCA Help Center at: www.rca.com

Limited 90 Day Warranty

Thomson multimedia Inc. warrants that for 90 days from date of purchase, it will replace this product if found to be defective in materials or workmanship. Return it postage prepaid to the Product Exchange Center address for prompt, no charge replacement with a current equivalent. This replacement is Thomson multimedia Inc.'s sole obligation under this warranty. Thomson multimedia Inc. will not be responsible for any incidental or consequential damages or for any loss arising in connection with the use or inability to use this product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty excludes defects or damage due to misuse, abuse, or neglect. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

© 2001 Thomson multimedia Inc.

Product Exchange Center

 
 
11721 Alameda Ave.

 
 
Socorro, TX 79927

 
PRCU410RS Rev0401

Trademark(s) ©Registered Marca(s) Registrada(s)

Made in Indonesia








RCM

First Class
Postage
Required

Thomson multimedia Inc.
2000 Clements Bridge Road
Deptford, NJ 08096-2011

 Attn: Remote Control
Purchase Registration



Inside Card

RCU410RS Product Registration

Please complete and return this Purchase Registration Card right away. This information will help us get to know and service our customers better.

1. Mr. Mrs. Ms. Name: _____
Address: _____

2. Model: **RCU410RS**

3. Date of Purchase/Receipt as Gift: _____ 4. Price: \$ _____

5. Age of Purchaser/Gift Recipient:

16-25 26-35 36-45 46-55 56+

6. What specific need did the Universal Remote help you resolve?

A. Replacing A Lost Remote B. Replacing A Broken Remote
 C. Consolidating Remotes D. Adding an Extra Remote

7. Where will this remote primarily be used?

and with what brand? TV: _____

VCR: _____ Cable Box: _____

A. Kitchen B. Bedroom C. Family Room/Living Room
 D. Other _____

8. How did you become aware of this remote?

A. Advertisement B. Salesperson C. Store Display
 D. Received as a Gift E. Friend or Relative _____
 F. Other _____

9. What other brands did you consider buying?

A. None B. RCA C. One For All D. Zenith
 E. Magnavox F. Sony G. Other _____

10. What factors most influenced this purchase? (Check up to 3)

A. Brand B. Features C. Recommendation
 D. Price E. Received as a Gift F. Other _____

Thank you for filling out this card. This information will help us better serve you and others who purchase RCA Consumer Electronics Products. We will not share your information with any other companies.

Inside Card